BrightRidge® REMOTE USER GUIDE Broadband

Quick Reference Guide for the BrightRidge IPTV 4K Fire TV Stick

Power Button

Press **Power** button to turn on Fire TV Stick.

Change Channel

Channel Up: Press top of Navigate ring

Channel Down: Press bottom of **Navigate** ring.

Navigation

Move around the Fire TV environment by using the **Navigate** ring to move up, down, left, and right.

> Back 🗩 Home 🎯 Menu 🖨

Channel Guide

Access Guide: Press Menu button and then press Select button.

Exit Guide: Press Menu button.

Volume Bar

Increase Volume: Press the + on Volume Bar.

Decrease Volume: Press the - on Volume Bar.

Mute 4



-Voice Button

Use the **Voice** button to search for content, complete actions, and more via Alexa speech commands.

Select Button

Use **Navigate** ring to highlight your desired item in the BrightRidge app, and then press **Select** button (center inside the ring) to make your selection.

Rewind Play/Pause Fast Forward

Use the time control buttons or use the **Navigate** ring to rewind, play, pause, or fast forward.

Rewind:

While watching a program, press left on **Navigate** ring to desired point and press **Select** button.

Fast-forward: While watching a program, press right on **Navigate** ring.

Go Live: Press Select button, use Navigate ring to highlight Go Live, and press the Select button.

Use the BrightRidge App to access your IPTV service!

For more information or instructions, please visit www.mybrightridge.com or call BrightRidge Customer Service at (423) 952-5000.



QUICK START

To begin enjoying your BrightRidge IPTV service, please follow these Quick Start instructions. For more assistance, please call (423) 952-5000.

- **1.** Power on television and then Fire TV Stick.
- 2. Use Navigate ring to locate and select the BrightRidge App.
- 3. Press Menu button 🖨 and select Guide option.
- 4. Select channel using Navigate ring and then press Select button to play.

BRIGHTRIDGE IPTV FEATURES

Channel Guide

View other channels: Press top or bottom on **Navigate** ring to go lower or higher in the guide.

View other times: Press left or right on **Navigate** ring to go forward or return to current time.

Tune to a channel: Press **Select** button to see program details. Press **Select** button again to tune to program.

Restart

Restart allows you to start a program that is already in progress from the beginning.

From Play from the beginning pop-up: Press Select button.

From a program: Press **Select** button, use **Navigate** ring to highlight **Restart**, press **Select** button.

Record

From the guide: Find a program in the guide, press **Select** button to see details, use **Navigate** ring to highlight **Record**, and press **Select** button. If prompted, choose 'Record this episode only' or 'Record all episodes' based on preference.

From a program: Press **Select** button to open menu, highlight • REC, press **Select** button. If prompted, choose 'Record this episode only' or 'Record all episodes' based on preference.

Access Recording

Press **Menu** button, use **Navigate** ring to highlight **Profile** • (right of movies) and press **Select** button.

*Note: You can view your used recording space in the upper right corner.

Audio/Subtitle (Closed Caption)

Press **Select** button, use **Navigate** ring to highlight **Audio/Subtitle**, press the **Select** button.

Access Replay TV

Press **Menu** button and select **Guide** option, find the desired channel, press left on **Navigate** ring to see and highlight **Replay**, press **Select** button, and then **Navigate** to and **Select** desired content.

Filter Controls

Press Menu button and select Guide option, use left on Navigate ring to select Filter, and then choose desired Filter Catergory. Navigate to and Select desired content.